
6. Exploded View & Parts List


6-1 CW28C73NS8XXEC

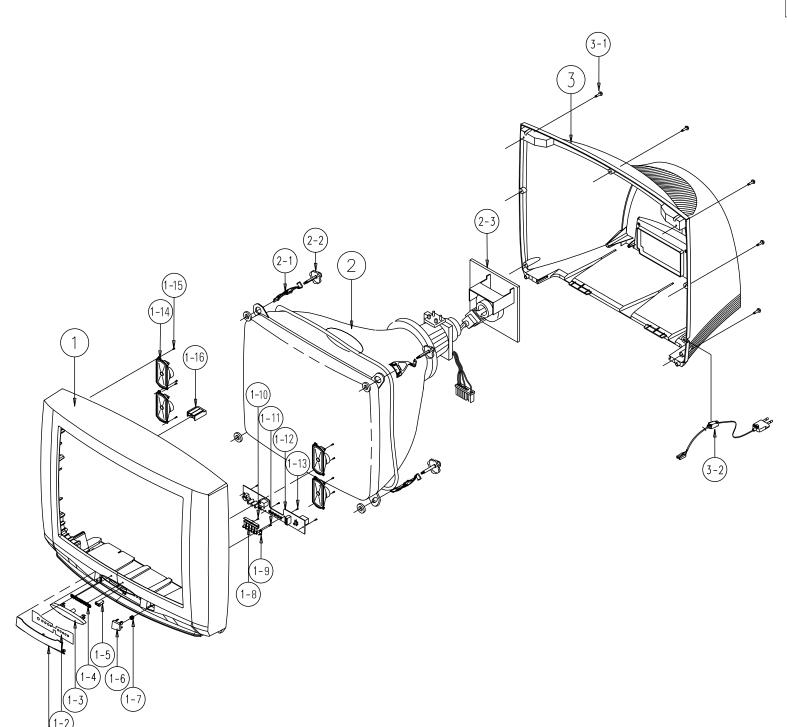

No	Code No	Description;Specification	Q'ty	Remark
1	AA90-01087C	ASSY-CABINET(COM);SILVER,SET 28C7	1	
1*	AA64-02420F	CABINET-FRONT;28C7,HIPS,HB,SV-012P-II,GR	1	
1-1	HA64-27016A	DOOR-CONTROL;28C7,HIPS,HB,SV-012P-II	1	
1-2	AA64-00189B	INLAY-CONTROL;28C7,PS,T0.3,-,-,BLK,S51A	1	
1-3	AA64-00190A	WINDOW-REMOCON;-,28C7,-,PC,-,VIOLET,-	1	
1-4	AA64-70117B	BADGE-BRAND;-,AL,-,-,L65,R2000,SILVER,SS	1	
1-5	AA61-30001A	LATCH-DOOR;-,-,-,-,KIFUCO LA701	1	
1-6	AA64-02509B	KNOB POWER;28C7,HIPS,HB,SV-012P-II,GRY	1	
1-7	AA61-60003T	SPRING-CS;-,SUS304,-,-,OD7,N5,OD7,-,-,-,	1	
1-8	AA64-02482A	KNOB CONTROL;28C7,HIPS,HB,GRY	1	
1-9	AA64-00191A	INDICATOR-LED;28C7,ACRYL,-,CLR,-,-,-	1	
1-10	6002-000515	SCREW-TAPPING;RH,+,2,M4,L15,ZPC(WHT),SWR	1	CF+KC
1-11	6002-000515	SCREW-TAPPING;RH,+,2,M4,L15,ZPC(WHT),SWR	1	CF+IND
1-12	AA95-01525A	ASSY PCB CONTROL;,KS3A,28C7,50HZ	1	
1-13	HA96-00091B	ASSY-SPEAKER;16##,10W,3001-001005,AA39-2	1	
1-14	6002-000515	SCREW-TAPPING;RH,+,2,M4,L15,ZPC(WHT),SWR	4	CF+SPK
1-15	AA61-40010A	BOSS-WING;-,HIPS,-,-,-,NTR,HB	1	
2	HA94-500023	ASSY-CRT;A66EHJ13X38,+450MG,28,ITC,NORM	1	
2-1	AA65-30007A	CLAMP-D,COIL;-,NYLON-66,V0,-,NTR,WIDE	4	
2-2	AA60-10050Q	SCREW-ASSY;-,SWRCH18A,M5,L26.5,HH,+,WC,-	4	CF+CRT
2-3	3704-001105	SOCKET-CRT;11P,20PI,26.5PI,NI,-	1	V999S
3	HA64-02431B	CABINET BACK;CABINET BACK;28C7,HIPS,HB,G	1	
3-1	6002-000515	SCREW-TAPPING;RH,+,2,M4,L15,ZPC(WHT),SWR	7	CB+CF
3-2	AA96-20122B	ASSY-POWER,CORD;-,CP2/NO(4.0),H/C500MM,K	1	

Samsung Electronics 6-1


6-2 CW28D83NS8XXEC

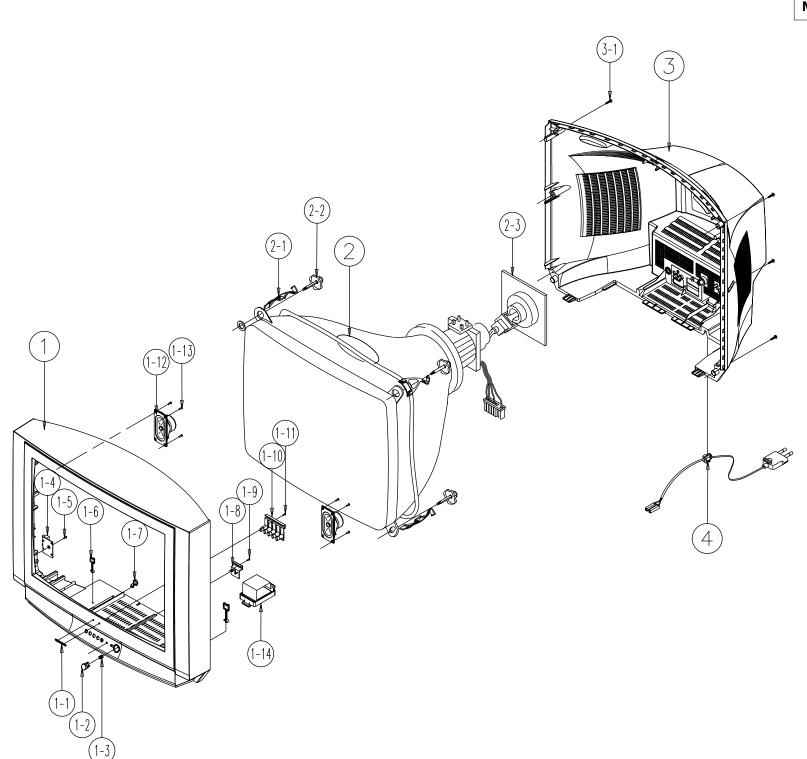

No	Code No	Description;Specification	Q'ty	Remark	
1	HA91-04037A	ASSY CABINET FRONT;HIPS,HB,SV-012P-II,28	1		
1*	AA64-02312A	CABINET-FRONT;28D8(SEH),HIPS,HB,SV012P-I	1		
1-1	AA64-70117B	BADGE-BRAND;-,AL,-,-,L65,R2000,SILVER,SS	1		
1-2	AA64-02316A	KNOB-POWER;28D8(SEH),HIPS,HB,GRY	1		
1-3	AA61-60003J	SPRING-CS;-,SUS304,-,-,OD6,N7,OD6,-,-,-,	1		
1-4	AA95-01788P	ASSY SUB-PCB,A/V SIDE;CT-29H1D,KS2ANTSC,	1		
1-5	6003-001019	SCREW-TAPTITE;RH,+,B,M4,L12,ZPC(BLK),SWR	1	CF+PCB	
1-6	AA65-30105A	CLAMP-WIRE;ALL MODEL,NYLON 66,V2,-,NTR,1	2		
1-7	AA61-40113A	STOPPER-PCB;501H,HIPS,-,-,HB,NTR,-	1		
1-8	HA64-02315A	WINDOW-RMC,LED;28D8(SEH),PC,CLR	1		
1-9	6003-001019	SCREW-TAPTITE;RH,+,B,M4,L12,ZPC(BLK),SWR	1	CF+WR	
1-10	AA64-02868A	KNOB CONTROL;25D8,HIPS,HB,GRY	1		
1-11	6003-001019	SCREW-TAPTITE;RH,+,B,M4,L12,ZPC(BLK),SWR	1	CF+KC	
1-12	3001-001092	SPEAKER;10W,8ohm,87dB,150Hz	2		
1-13	6003-001019	SCREW-TAPTITE;RH,+,B,M4,L12,ZPC(BLK),SWR	8	CF+SPK	
1-14	HA61-00995A	HOLDER-PFC;ALLMODELL,HIPS			
2	HA94-500023	ASSY-CRT;A66EHJ13X38,+450MG,28,ITC,NORM	1		
2-1	AA65-30113A	CLAMP-D,COIL;-,NYLON 66,V2,-,BLK,TVI 25~	4	CRT	
2-2	AA60-10050Q	SCREW-ASSY;-,SWRCH18A,M5,L26.5,HH,+,WC,-	4	CRT+CF	
3	HA64-02313A	CABINET-BACK;28D8(SEH),HIPS,HB,GRY	1		
3-1	6002-000515	SCREW-TAPPING;RH,+,2,M4,L15,ZPC(WHT),SWR	7	CB+CF	
4	AA96-20122B	ASSY-POWER,CORD;-,CP2/NO(4.0),H/C500MM,K	1	P/CORD	

6-2 Samsung Electronics


6-3 CW29K84NS8XXEC

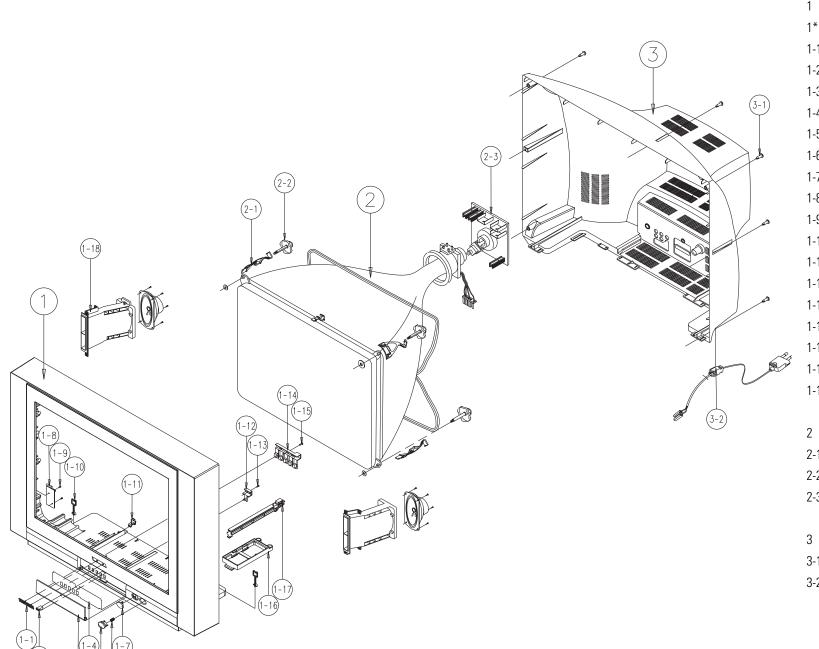

No	Code No	Description;Specification	Q'ty	Remark
1	HA91-00830A	ASSY CABINET FRONT;29K8,KS2A,FLAT,HIPS	1	
1*	AA64-02439A	CABINET-FRONT;29K8,HIPS,HB,SV-012P-II,GR	1	
1-1	AA64-70117B	BADGE-BRAND;-,AL,-,-,L65,R2000,SILVER,SS	1	
1-2	AA61-30001A	LATCH-DOOR;-,-,-,-,-,KIFUCO LA701	1	
1-3	AA64-02591A	DOOR CONTROL;29K8,HIPS,SV-012P-II,SILVER	1	
1-4	AA64-02057B	INLAY CONTROL;29K8,PS SHEET,T0.3,-,-,-,S	1	
1-5	AA64-02499A	KNOB POWER;29K8,HIPS,HB,SV-012P-II	1	
1-6	AA61-60003J	SPRING-CS;-,SUS304,-,-,OD6,N7,OD6,-,-,-,	1	
1-7	AA64-02467A	WINDOW REMOCON;29K8,PC,VIOLET	1	
1-8	AA95-01518A	ASSY-PCB A/V BOARD;,29K8,KS3A,50HZ	1	
1-9	6003-001135	SCREW-TAPTITE;TH,+,B,M4.0,L15,BLK,SWRCH1	2	CF+AV
1-10	AA65-30110A	CLAMP-WIRE;ALL MODEL,NYLON 66,V2,-,BLK,P	1	
1-11	AA64-02462A	INDICATOR LED;29K8,ACRYL,CLR	1	
1-12	6002-000515	SCREW-TAPPING;RH,+,2,M4,L15,ZPC(WHT),SWR	1	LED+CF
1-13	AA64-01902B	KNOB CONTROL;29K8,HIPS,HB,NTR	1	
1-14	6002-000515	SCREW-TAPPING;RH,+,2,M4,L15,ZPC(WHT),SWR	1	CF+KC
1-15	HA61-00711C	HOLDER-PCB;29K8,HIPS,HB,GRY	1	
1-16	AA91-00507B	ASSY HOLDER SPK;DP,-,80HM/15W,-,29K1 CKD	1	
1-17	6003-001024	SCREW-TAPTITE;RWH,+,B,M4,L12,ZPC(YEL),SW	8	CF+SPK
2	AA94-05795A	ASSY CRT;A68QCP891X307,+400MG,29,ITC,2	1	
2-1	AA65-30113A	CLAMP-D,COIL;-,NYLON 66,V2,-,BLK,TVI 25~	4	
2-2	AA60-10050V	SCREW-ASSY;-,SWRCH18A,M6,L30,HH,+,WC,-,Z	4	CRT+CF
2-3	3704-000114	SOCKET-CRT;14P,29.1,35.5,SN,ISH09S/BK	1	VA999
3	HA64-02448A	CABINETBACK;29K8,HIPS,HB,GRY	1	
3-1	6003-001025	SCREW-TAPTITE;RH,+,B,M4,L20,ZPC(BLK),SWR	7	CB+CF
3-2	AA96-00094A	ASSY-POWER,CORD;DP,CP2/NO(4.0),H/C350MM,	1	

Samsung Electronics 6-3


6-4 WS28W8VNE8XXEC

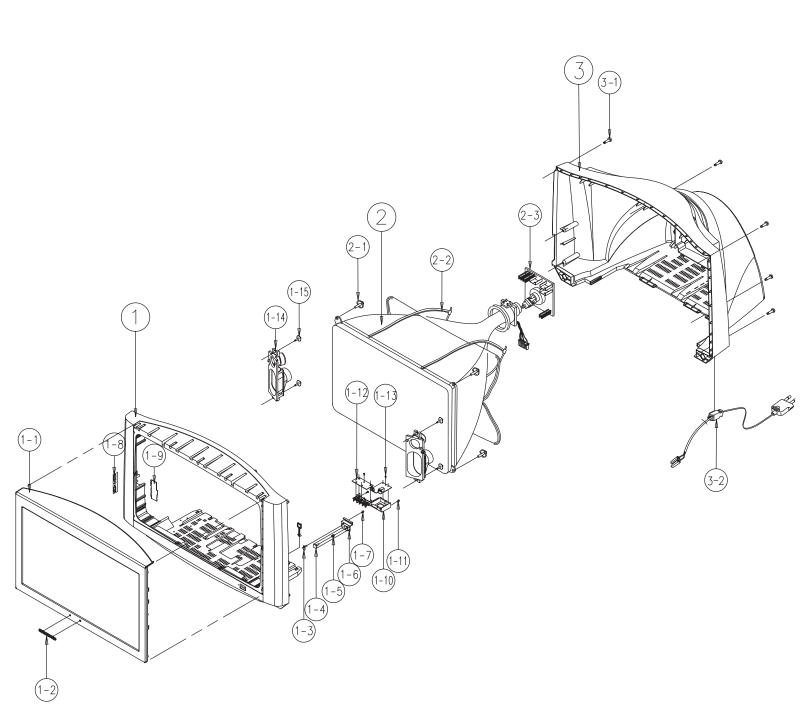

No	Code No	Description;Specification	Q'ty	Remark
1	HA91-00881A	ASSYCABINETFRONT;28W8,PLANO,SV-906P	1	
1*	AA64-02432A	CABINET-FRONT;28W8,HIPS,HB,SV-907P,GRY	1	
1-2	AA64-01062A	BADGE-BRAND;32W8,AL FORGING,-,-,L65,-,SI	1	
1-3	HA64-00916B	INDICATOR-LED;32W8,ACRYL,-,CLR,-,-,-,	1	
1-4	AA64-02505A	KNOB POWER;32W8,HIPS,HB,BLK	1	
1-5	AA61-60003T	SPRING-CS;-,SUS304,-,-,OD7,N5,OD7,-,-,-,	1	
1-6	HA64-00915B	WINDOW-REMOCON;32W8,PC,-,-,-,-VIOLET,-	1	
1-7	6002-000515	SCREW-TAPPING;RH,+,2,M4,L15,ZPC(WHT),SWR	1	WIN+CF
1-8	AA95-01521A	ASSY-PCB A/V BOARD;,28W8,29A8,KS3A,50HZ	1	
1-9	AA64-60399C	INLAY-AV;-,PS SHEET,TO.3,-,-,BLK,S/GRAY	1	
1-10	HA91-00910A	ASSY-KNOB-CONTROL;HIPS,HB,GRY,32W8	1	
1-11	6002-000515	SCREW-TAPPING;RH,+,2,M4,L15,ZPC(WHT),SWR	2	CF+KC
1-12	AA95-01530A	ASSY PCB CONTROL;,KS3A,XXA8-W8	1	
1-13	6003-001023	SCREW-TAPTITE;RWH,+,B,M3,L10,ZPC(YEL),SW	2	KC+PCB
1-14	AA91-00150B	ASSY-HOLDER,SPK;DP,-,80HM/15W,-,AA91-001	1	
1-15	AA60-10050A	SCREW-ASSY;-,SWRCH18A,M4,L25,RH,+,WP,-,Z	4	SPK+CF
2	AA94-05796A	ASSY CRT;W66QDE893X001,400MG,28,16:9,I	1	
2-1	AA60-10050V	SCREW-ASSY;-,SWRCH18A,M6,L30,HH,+,WC,-,Z	4	CRT+CF
2-2	AA65-30007A	CLAMP-D,COIL;-,NYLON-66,V0,-,NTR,WIDE	4	
2-3	3704-000114	SOCKET-CRT;14P,29.1,35.5,SN,ISH09S/BK	1	VA999
3	HA64-02444A	CABINETBACK;28W8,HIPS,HB,GRY	1	
3-1	6003-001025	SCREW-TAPTITE;RH,+,B,M4,L20,ZPC(BLK),SWR	8	CB+CF
3-2	AA96-00094A	ASSY-POWER,CORD;DP,CP2/NO(4.0),H/C350MM,	1	

6-4 Samsung Electronics

6-5 WS28Z46VS8XXEC

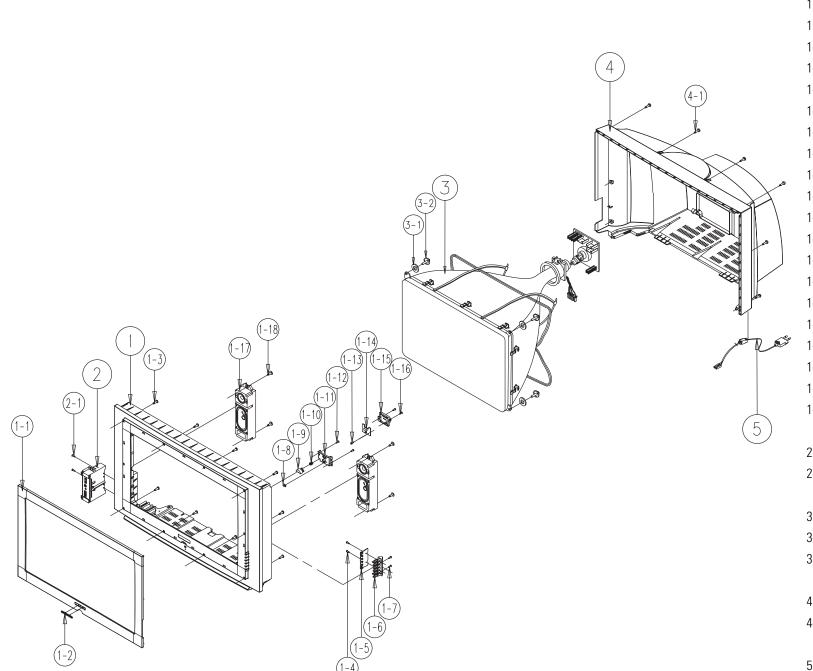

No	Code No	Description;Specification	Q'ty	Remark
1	HA91-00857C	ASSY CABINET FRONT;28Z4,KS3A,FLAT,99HZ	1	
1*	AA64-02108B	CABINET-FRONT;28Z4,HIPS,HB,SV-012P-II+PA	1	
1-1	AA64-02112C	CABINET-MASK;28Z4,HIPS,HB,GD-906P,GRY	1	
1-2	AA64-70117B	BADGE-BRAND;-,AL,-,-,L65,R2000,SILVER,SS	1	
1-3	6002-000515	SCREW-TAPPING;RH,+,2,M4,L15,ZPC(WHT),SWR	10	CF+CM
1-4	6001-000057	SCREW-MACHINE;RH,+,M3,L6,ZPC(BLK),SWRCH1	2	KC+PCB
1-5	AA95-01531A	ASSY PCB CONTROL;,KS3A,XXZ4	1	
1-6	HA64-01201J	KNOBCONTROL;32W5,HIPS,HB,GD-906P,GRY	1	
1-7	6002-000515	SCREW-TAPPING;RH,+,2,M4,L15,ZPC(WHT),SWR	2	CF+KC
1-8	AA64-01203B	INDICATOR LED;32Z5,ACRYL,-,CLR,-,-,-	1	
1-9	AA64-01200J	KNOB POWER;32Z5,HIPS,HB,SV-012P-II,GRY	1	
1-10	AA61-60003T	SPRING-CS;-,SUS304,-,-,OD7,N5,OD7,-,-,-,	1	
1-11	AA64-01202B	WINDOW REMOCON;32Z5,PC,-,-,-,VO,VIOLET,-	1	
1-12	6002-000515	SCREW-TAPPING;RH,+,2,M4,L15,ZPC(WHT),SWR	2	WIN+CF
1-13		SCREW-TAPPPING		
1-14	6001-000057	SCREW-MACHINE;RH,+,M3,L6,ZPC(BLK),SWRCH1	3	HP+PCB
1 -15	HA61-00450C	HOLDER-POWER;32Z5,HIPS,HB,GRY	1	
1-16	6002-000515	SCREW-TAPPING;RH,+,2,M4,L15,ZPC(WHT),SWR	2	CF+HP
1-17	AA91-00820A	ASSY HOLDER SPK;-,-,15W, 80HM,-,EUROPE F	2	
1-18	6003-001024	SCREW-TAPTITE;RWH,+,B,M4,L12,ZPC(YEL),SW	8	CF+SPK
2	AA91-00995A	ASSY-SIDE,AV;,KS3A,SVHS,28Z4H	1	
2-1		SCREW-TAPPPING		
3	AA94-05801A	ASSY CRT;W66QDE893X100,+380MG,28,16:9,	1	
3-1	AA65-30007A	CLAMP-D,COIL;-,NYLON-66,V0,-,NTR,WIDE	4	
3-2	AA60-10050V	SCREW-ASSY;-,SWRCH18A,M6,L30,HH,+,WC,-,Z	4	CRT+CF
4	HA64-02524A	CABINETBACK;28Z4,HIPS,HB,GRY	1	
4-1	6003-001025	SCREW-TAPTITE;RH,+,B,M4,L20,ZPC(BLK),SWR	8	CB+CF
5	AA96-00094A	ASSY-POWER,CORD;DP,CP2/NO(4.0),H/C350MM,	1	

Samsung Electronics 6-5